

TP-Link VR400




These instructions are to help you configure your router for IPv6. Please note that different firmware versions and models of routers may have slightly different configurations.

Firmware Version Tested: 1.3.0 0.9.1 v00a1.0 Build 201109 Rel.54507n

Connection Type: IPoE - Ethernet

1. Open a web browser, such as Google Chrome or Mozilla Firefox, type <http://router.asus.com> or <http://192.168.1.1> into the address bar, and press **Enter**.
2. Log in using the password you have previously set, if you cant remember try **admin**.
3. Click on **Advanced** at the top of the page (to skip the quick setup).
4. Click on **Network**, and then select **Internet**.

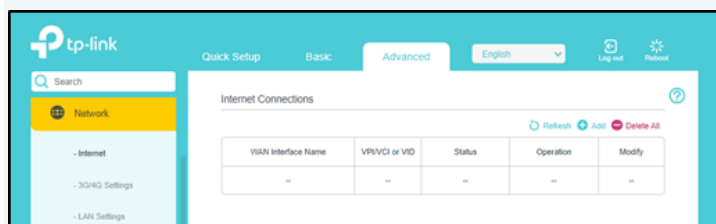

5. If there are no entries in the table, and then click **+Add**, otherwise you can **Edit** your existing connection. Configure the connection as below, and then click **Save**.

- VLAN ID: **Disable**
- Internet Connection Type: **Dynamic IP**
- IPv4: **Enable**
- Default Gateway: **Current Connection**
- IPv6: **Enable**
- Addressing Type: **DHCPv6**
- IPv6 Default Gateway: **Current Connection**
- MAC Clone: **Do NOT Clone MAC Address**

Internet Connections

| WAN Interface Name | VLAN ID | Status | Operation | Modify |
|--------------------|---------|--------|-----------|--------|
| -- | -- | -- | -- | -- |

Ethernet Configuration

VLAN ID: Enable

Internet Connection Type:

IPv4: Enable

IP Address:

Subnet Mask:

Gateway:

Default Gateway:

IPv6: Enable

IPv6 Address:

Prefix Length:

IPv6 Gateway:

Addressing Type:

IPv6 Default Gateway:

Advanced

MAC Clone

Do NOT Clone MAC Address

Clone Current Computer MAC Address

Use Custom MAC Address

Please note that this document is intended as a guide only and is not for a router that we currently sell. Our support team will not be able to advise of further steps, and recommend contacting the manufacturer if you need further assistance with the configuration of this device