



Router Connection Guide - VX230v



Neoloop (FTTN/B)

These instructions explain how to connect your TP-Link router to Neoloop's Fibre to the Node (FTTN) or Fibre to the Building (FTTB) network. Please contact support if you have any questions, our contact details are at the end of this guide.

1. Locate the telephone port which has been enabled for your Neoloop service. If you are unsure, you may need to plug the router into each telephone wall port in your house until you find one that works. The port looks similar to one of the following:



2. Run the supplied telephone cable from the grey DSL port on the TP-Link router to line socket on wall.




3. Turn your router on by pressing the On/Off button located on the back of the router.



4. You should now see the DSL light located on the front of the router flash for a few seconds before going solid green.

5. After 60 seconds the internet light should also come on.

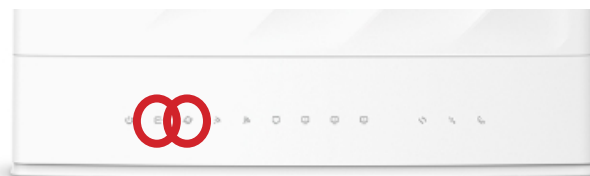

6. You are now online and able to connect to the internet.

- a) If you wish to connect via Wi-Fi, look on the bottom of your router for your Wi-Fi details and use the credentials supplied to connect your device. Your Wi-Fi details are also provided on a magnet in the box with your router.
- b) If you wish to connect via ethernet, plug the cable from your device into one of the yellow LAN ports located on the back of your router. Some homes have had ethernet cables run which can be used for this purpose. Please talk to your electrician or builder for further information.



If you have any trouble getting online, we're here to help.
Get in touch by scanning the QR code above or visiting leaptel.com.au/contact-us.

LAST UPDATED: 1/09/2026

