

Netcomm NF18AVC - nbn Fibre to the Node

Step 1:

Plug modem into computer with the yellow cable supplied. Plug it into a yellow plug on the modem

Step 2:

Open up your internet browser on your computer and use 192.168.20.1 as the URL.




Step 3:

When prompted enter the following

Username: admin

Password: admin

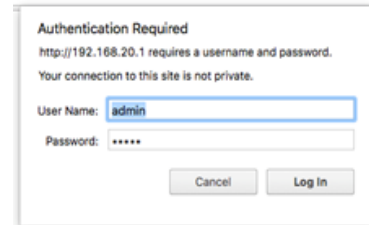

Step 4:

Click on "Basic Settings" from the menu on the left.



Step 5:

Select "VDSL" as your WAN connection type
Then click next

Basic > Quick Setup > Internet Setup (Select one DSL mode)

This Wizard is designed to walk you through the basic information needed to set up your device
To continue, please select your WAN connection type.

- ADSL
 VDSL
 Ethernet WAN

Next

Step 6:

Select PPPoE as the internet connection
Then click next

Basic > Quick Setup > WAN Setup (Select one WAN mode)

Select the WAN mode for your internet connection as specified by your Internet Service Provider (ISP).

- PPP Over Ethernet (PPPoE)
 IP over Ethernet (IPoE)
 Bridging

Back Next

Step 7:

Select "Custom VLAN Tag"
Set VLAN Tag to "100"
Then click next

Basic > Quick Setup > VLAN Setup

Please select the correct VLAN option for your connection:
If you are unsure, please contact your ISP

- No VLAN Tag
 VLAN Tag 10 (For most New Zealand Customers)
 Custom VLAN Tag

VLAN Tag: (0-4094)

Back Next

Step 8:

Enter your username and password
Username – found in Simplicity
Password – found in Simplicity
Then click Finish.

Basic > Quick Setup > VDSL only > PPPoE Information

Enter the User ID and Password assigned to you by your Internet Service Provider (ISP).

User ID:
Password:

Back Finish