


Netcomm NF18AVC - nbn Fibre to the Premise

Step 1:

Plug modem into computer with the yellow cable supplied. Plug it into a yellow plug on the modem


Step 2:

Open up your internet browser on your computer and use 192.168.20.1 as the URL.



Step 3:

When prompted enter the following
 Username: admin
 Password: admin

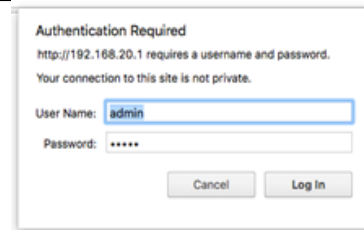


Step 4:

Click on "Basic Settings" from the menu on the left.




Step 5:

Select "Ethernet WAN" as your WAN connection type
 Then click next

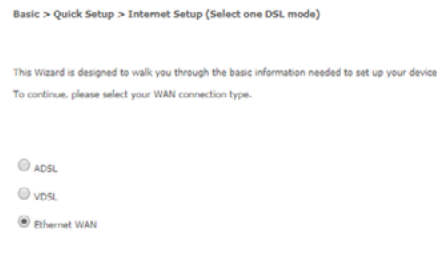

Step 6:

Select PPPoE as the internet connection
 Then click next

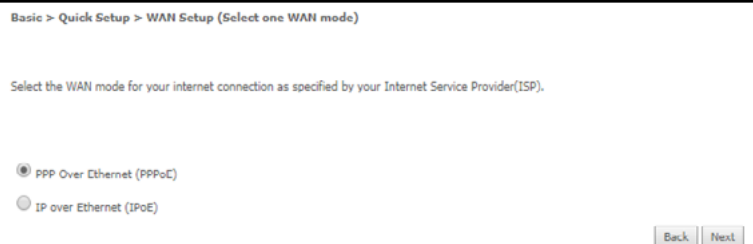

Step 7:

Select "No VLAN Tag"
 Then click next



Step 8:

Enter your username and password
 Username – found in Simplicity
 Password – found in Simplicity
 Then click Finish.

