

# Netcomm NF18AVC - nbn Hybrid Fibre Coaxial

## Step 1:

Plug modem into computer with the yellow cable supplied. Plug it into a yellow plug on the modem

## Step 2:

Open up your internet browser on your computer and use 192.168.20.1 as the URL.




## Step 3:

When prompted enter the following

Username: admin

Password: admin

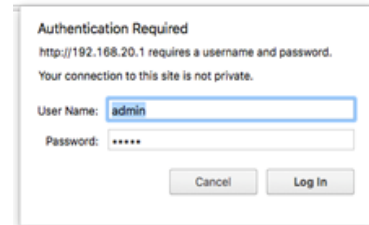

## Step 4:

Click on “Basic Settings” from the menu on the left.



## Step 5:

Select “Ethernet WAN” as your WAN connection type  
Then click next

Basic > Quick Setup > Internet Setup (Select one DSL mode)

This Wizard is designed to walk you through the basic information needed to set up your device  
To continue, please select your WAN connection type.

- ADSL  
 VDSL  
 Ethernet WAN

Next

## Step 6:

Select PPPoE as the internet connection  
Then click next

Basic > Quick Setup > WAN Setup (Select one WAN mode)

Select the WAN mode for your internet connection as specified by your Internet Service Provider(ISP).

- PPP Over Ethernet (PPPoE)  
 IP over Ethernet (IPoE)

Back Next

## Step 7:

Select “Custom VLAN Tag”  
Set VLAN Tag to “100”  
Then click next

Basic > Quick Setup > VLAN Setup

Please select the correct VLAN option for your connection:  
If you are unsure, please contact your ISP

- No VLAN Tag  
 VLAN Tag 10(For most New Zealand Customers)  
 Custom VLAN Tag

VLAN Tag:  (0-4094)

Back Next

## Step 8:

Enter your username and password  
Username – found in Simplicity  
Password – found in Simplicity  
Then click Finish.

Basic > Quick Setup > Ethernet WAN only > PPPoE Information

Enter the User ID and Password assigned to you by your Internet Service Provider (ISP).

User ID:   
Password:

Back Finish