

D-Link DVA-2800 - NBN FTTN

Step 1:

Plug modem into computer with the yellow cable supplied. Plug it into the yellow plug on the modem


Step 2:

Open up your internet browser on your computer and use 192.168.1.1 as the URL.




Step 3:

When prompted enter the following Password: admin

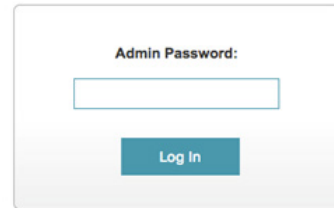


Step 4:

Click on "Cancel" when the setup wizard pops up

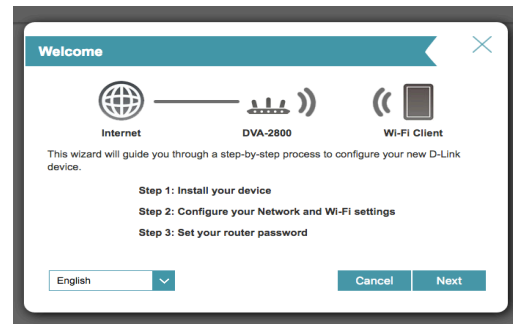

Step 5:

Hover over "Settings" and then select "Wireless"

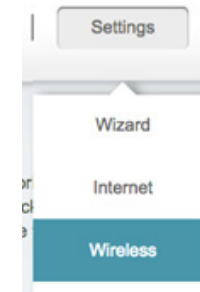

Step 6:


2.4GHz:

Wi-Fi Name (SSID): LeapTel-(ServiceID)
Password is found in simplicity or on the back of your modem.

5GHz:

Wi-Fi Name (SSID): LeapTel-(ServiceID)-5
Password is found in simplicity or on the back of your modem.


Then click on "Save"

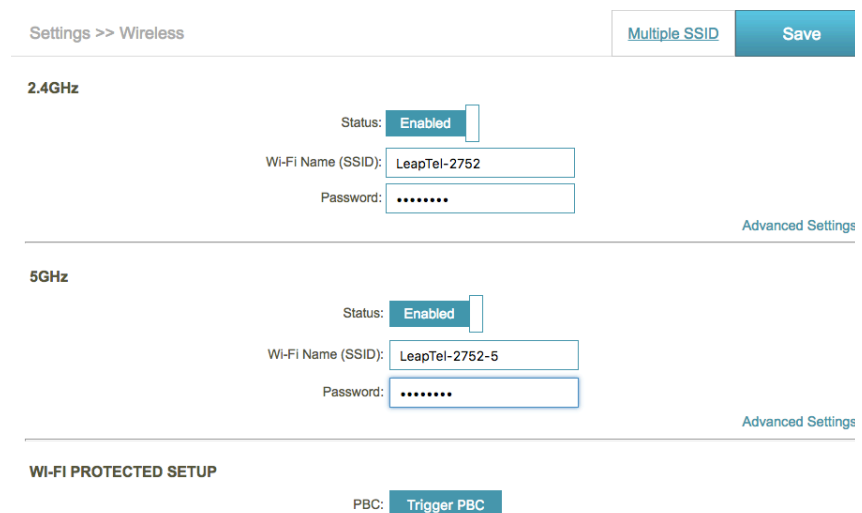

D-Link DVA-2800 - NBN FTTN

Step 7:

Hover over “Settings” and then select “Internet”

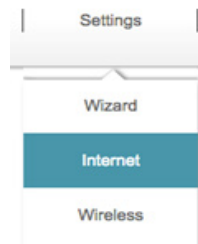

Step 8:

Select “VDSL” as your WAN access type

Enable the Interface

Enable VLAN Tagged:

Set VLAN ID to: 100

Set VLAN Priority to: 0

Your Internet Connection is: PPPoE

Your Username is: firstname.lastname@leaptel.com.au

Your Password is found in simplicity or on the back of your modem.

Then click “Save”

WAN Access Type:

Interface:

Service Type:

Enable Interface:

VLAN Tagged:

VLAN ID:

VLAN Priority:

My Internet Connection is:

Username:

Password:

Reconnect Mode:

[Advanced Settings](#)

Step 9:

Follow the instructions that came in the box on a double-sided piece of paper to plug in and connect your modem to the internet and then connect to your modem.